

**3M Occupational Health & Environmental Safety**  
**3M™ 4000 Series Maintenance-Free Reusable Respirators**



Exceptional quality  
& unrivalled  
comfort

**3M 4000 Series Maintenance-Free Reusable Respirators**

The 3M 4000 Series is a range of half mask respirators with integral filters providing combined gas, vapour and particulate protection. They are to be used until the particulate filter clogs, the gas and vapour filter becomes saturated, until they become damaged or as directed by your company's policy on respirator use. A company may dictate that your 4000 Series Respirator is disposed of after one month regardless of its condition. There is then no requirement to keep the inspection and maintenance records required for respirators in longer term use.





## 3M™ 4000 Series Maintenance-Free Reusable Respirators

The 4000 Series Respirators by 3M are a range of ready-to-use, maintenance-free half masks designed for effective and comfortable protection against a combination of many gases, vapours and particulate hazards found throughout industry.

Utilising unique filter technology enables a very low-profile design for undisturbed field of vision to make your worklife more comfortable.

### Features and Benefits:

#### Facepiece

- + Low profile design for better peripheral vision
- + Lightweight, well balanced design
- + Soft, non-allergenic material with textured face seal

#### Built In Filters

- + Four versions available, each offering protection against differing hazards throughout industry
- + One piece, maintenance-free construction

#### Exhalation Valve

- + Central position for effective removal of heat and moisture build up within facepiece

#### Adjustable Head Cradle and Neck Straps

- + Stable secure fit
- + Easy to fasten neck strap

#### Cost Effective

- + Use until damaged, particulate filters clog or gas filters become saturated. No maintenance records required if disposed of within one month

#### Convenience


- + Resealable bag provides convenient and clean storage between uses

#### Extras

- + 3M™ 400 Overspray Guard Pre-Filter is available to help prolong the life of the main particulate filters

#### Fits well with

- + Eyewear from 3M
- + Hearing Protection from 3M

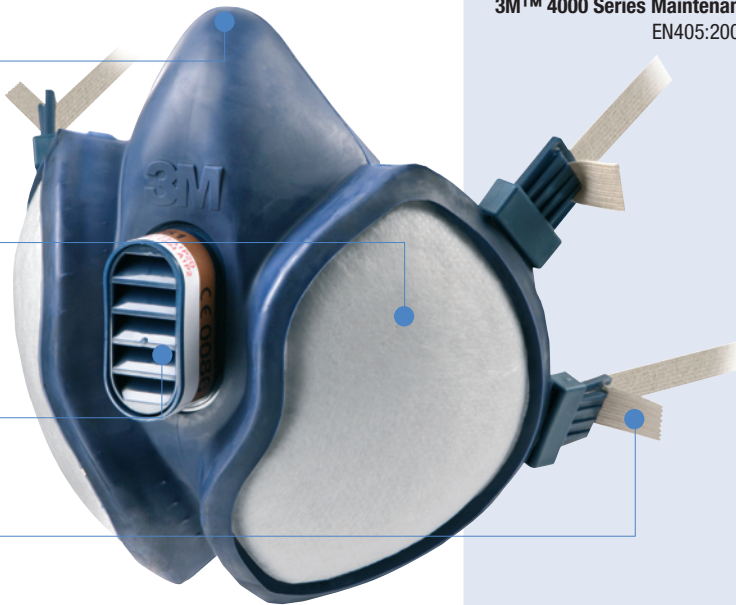

3M™ 4000 Series Maintenance-Free Respirators  
EN405:2001

### 3M™ Accessories for 4000 Series



- + 3M™ 400 Overspray Guard

### 3M™ 4000 Series Maintenance Free Respirators available:



**3M™ 4279**  
Organic vapour / inorganic + acid gas / ammonia / particulate respirator  
FFABEK1P3D

**3M™ 4251**  
Organic vapour + particulate respirator  
FFA1P2D

**3M™ 4255**  
Organic vapour + particulate respirator  
FFA2P3D

**3M™ 4277**  
Organic vapour / inorganic + acid gas / particulate respirator  
FFABE1P3D



### Occupational Health & Environmental Safety Group 3M United Kingdom plc

3M Centre,  
Cain Road, Bracknell  
Berkshire RG12 8HT  
Tel: 0870 60 800 60  
www.3M.co.uk/ohes

### 3M Ireland Limited

The Iveagh Building  
The Park  
Carrickmines  
Dublin 18  
Tel: 1 800 320 500

To find out about our full range of personal protective equipment please visit:

[www.3M.co.uk/ohes](http://www.3M.co.uk/ohes)

Please recycle. Printed in UK.  
© 3M 2010. All rights reserved.